

## User Manual 1U 17" FHD LCD Console Drawer

**F117**

**1080p  
Full HD**

1920 x 1080 native resolution



**F1417**

**1080p  
Full HD**

1920 x 1080 native resolution



Ultra short depth  
400mm / 15.7"

FC CE  REACH

Designed and manufactured by Austin Hughes

751

## Legal Information

First English printing, January 2018

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

## Safety Instructions

**Please read all of these instructions carefully before you use the device. Save this manual for future reference.**

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

## What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
  - Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - Repair or attempted repair by anyone not authorized by us.
  - Any damage of the product due to shipment.
  - Removal or installation of the product.
  - Causes external to the product, such as electric power fluctuation or failure.
  - Use of supplies or parts not meeting our specifications.
  - Normal wear and tear.
  - Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

## Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# Contents

## < Part. 1 > F117 / F1417

|     |                               |         |
|-----|-------------------------------|---------|
| 1.1 | Package Content               | P.1     |
| 1.2 | Structure Diagram & Dimension | P.2 - 3 |
| 1.3 | Installation                  | P.4 - 6 |
| 1.4 | Connection                    | P.8 - 9 |

## < Part. 2 > Specifications / OSD

|     |                                     |           |
|-----|-------------------------------------|-----------|
| 2.1 | Product Specifications              | P.10 - 11 |
| 2.2 | Keyboard / Mouse Specifications     | P.12 - 14 |
| 2.3 | On-screen Display Operation ( OSD ) | P.16 - 17 |

## < Part. 3 > Options

|     |  |           |
|-----|--|-----------|
| 3.1 | 3G / HD / SD- <b>SDI</b> Broadcast-grade input             | P.18      |
| 3.2 | HDMI 1.3 video input<br>Audio input & output ( F117 only ) | P.20 - 21 |
| 3.3 | F17" Touchscreen : Resistive 1-point touch                 | P.22 - 23 |
| 3.4 | DC Power : 12V / 24V / 48V / 125V                          | P.24      |
| 3.5 | ORB-2.1 : 2-post rack mounting brackets                    | P.25      |

## < Part. 4 > KVM integration

|     |       |      |
|-----|-------|------|
| 4.1 | F117  | P.26 |
| 4.2 | F1417 | P.27 |

## Before Installation

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

## Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

## How To Clean Your LCD Monitor



### Caution :

- To avoid the risk of electric shock, make sure your hands are dry before unplugging your monitor from or plugging your monitor into an electrical outlet.
- When you clean your monitor, do not press down on the LCD screen. Pressing down on the screen can scratch or damage your display. Pressure damage is not covered under warranty.
- Use only cleansers made specifically for cleaning monitors and monitor screens. Cleansers not made to clean monitors and monitor screens can scratch the LCD display or strip off the finish.
- Do not spray any kind of liquid directly onto the screen or case of your monitor. Spraying liquids directly onto the screen or case can cause damage which is not covered under warranty.
- Do not use paper towels or abrasive pads to clean your monitor. Using an abrasive pad or any wood based paper product such as paper towels can scratch your LCD screen.

## Cleaning Your Monitor

To clean your LCD safely, please follow these steps :

- ① Disconnect the power cord.
- ② Gently wipe the surface using a clean, dry microfiber cloth. Use as little pressure as possible.

## Cleaning Tough Marks and Smudges

To remove tough marks and smudges, please follow these steps :

- ① Disconnect the power cord.
- ② Spray a small amount of non-abrasive cleanser on a microfiber cloth.



**Caution : Do not spray or apply any liquids directly onto the monitor. Always apply the solution to your microfiber cloth first, not directly on the parts you are cleaning.**

- ③ Gently wipe the surface. Use as little pressure as possible.
- ④ Wait until your monitor is completely dry before plugging it in and powering it up.

## < Part 1 >

### < 1.1 > Package Content



F117


- CX-6 6ft DVI-D console cable X 1  
( Alternative : CB-6 6ft VGA console cable )
- Power cord X 1
- M6 screw, cage nut & cup washer X 8




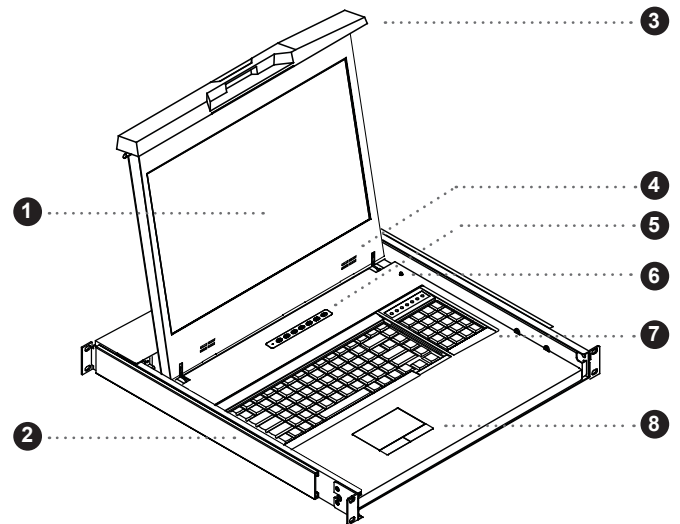
F1417


- CX-6 6ft DVI-D console cable X 1  
( Alternative : CB-6 6ft VGA console cable )
- 2.5A Power adapter & Power cord X 1
- M6 screw, cage nut & cup washer X 8

### < 1.2 > Structure Diagram

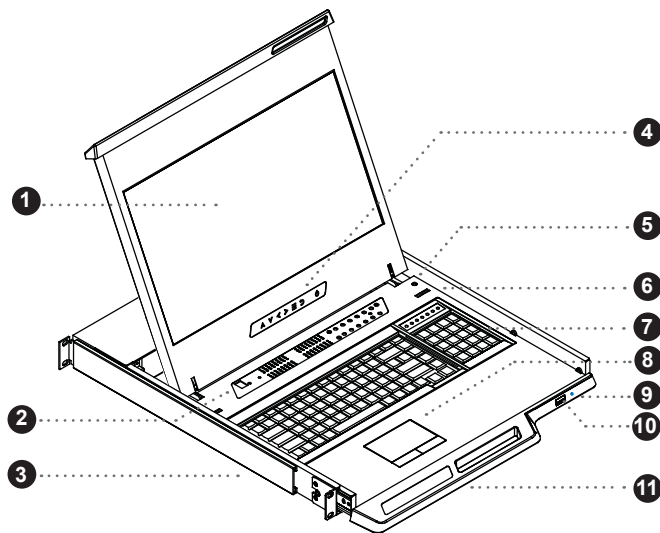

- ① LCD interchangeable module kit
- ② Membrane switch (KVM option)
- ③ Installation Slides
- ④ LCD membrane 
- ⑤ Micro switch for screen auto power off
- ⑥ Audio speaker ( for SDI or HDMI option )
- ⑦ Keyboard interchangeable module kit
- ⑧ Mouse interchangeable module kit
- ⑨ Blue Power LED
- ⑩ Front USB port for device access  
( USB Hub KVM only )
- ⑪ Molded front handle




- ① LCD interchangeable module kit
- ② Installation Slides
- ③ Molded front handle
- ④ Audio speaker ( for SDI or HDMI option )
- ⑤ LCD membrane 
- ⑥ Micro switch for screen auto power off
- ⑦ Keyboard interchangeable module kit
- ⑧ Mouse interchangeable module kit




The above package content is only for the single console models.  
It varies with options such as KVM, SDI, HDMI, Touchscreen & DC power.

## < 1.2 > Dimension - F117

### Front View

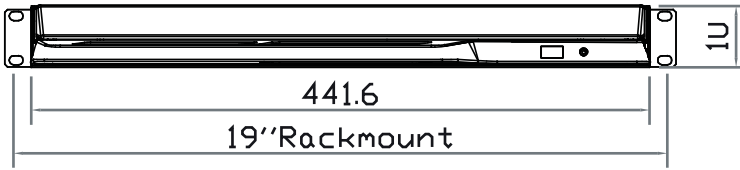


### Rear View

 


### Side View


UNIT : mm  
1mm = 0.03937 inch

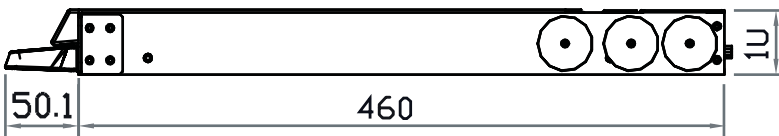

### Top View

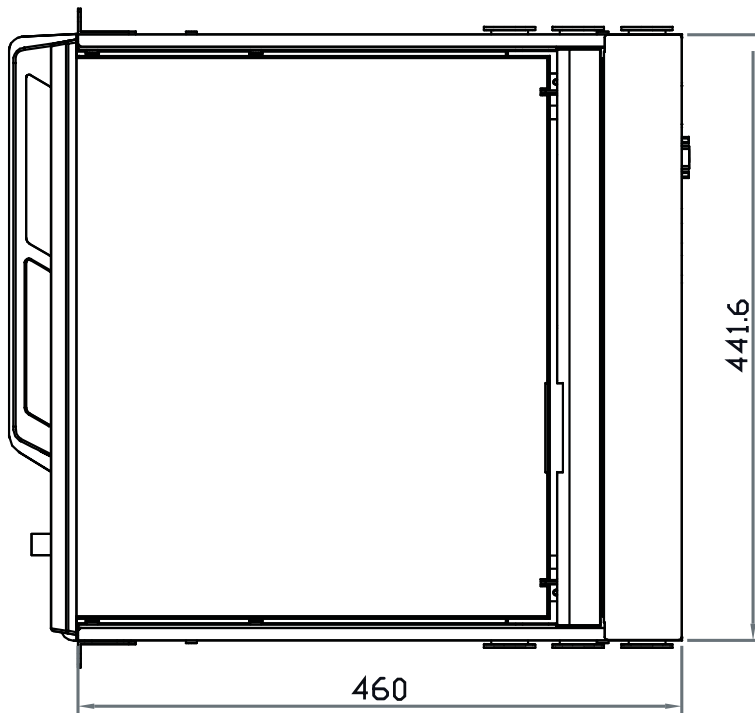


| Model | Product Dimension<br>(W x D x H)           | Packing Dimension<br>(W x D x H)         | Net Weight         | Gross Weight       |
|-------|--|--|--------------------|--------------------|
| F117  | 441.6 x 460 x 44 mm<br>17.4 x 18.1 x 1.73" | 590 x 808 x 140 mm<br>23.2 x 31.8 x 5.5" | 10.8 kg<br>23.8 lb | 15.8 kg<br>34.8 lb |

 **The weight is only for the single console models. It varies with accessories & options such as KVM, SDI, HDMI, Audio & DC power.**

## < 1.2 > Dimension - F1417


Front View

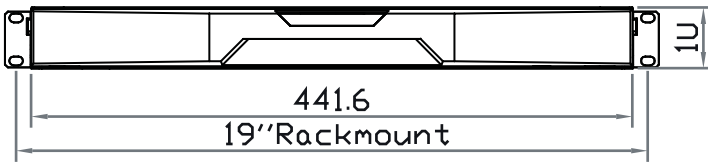

Rear View




Side View

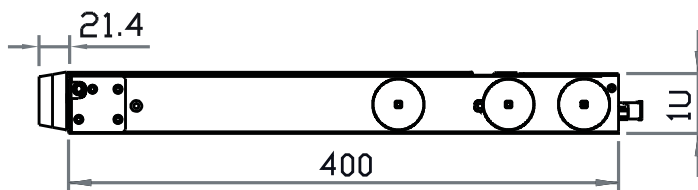

UNIT : mm  
1mm = 0.03937 inch

Top View

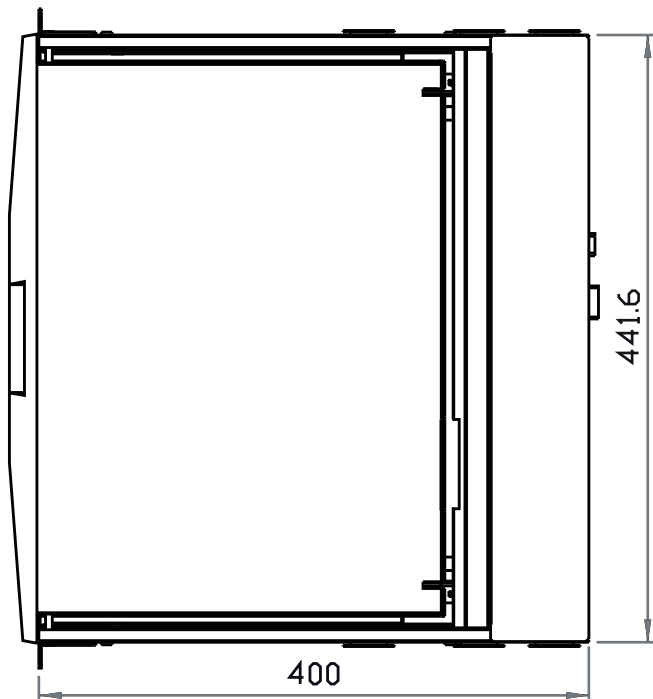


| Model | Product Dimension<br>(W x D x H)           | Packing Dimension<br>(W x D x H)         | Net Weight        | Gross Weight       |
|-------|--|--|-------------------|--------------------|
| F1417 | 441.6 x 400 x 44 mm<br>17.4 x 15.7 x 1.73" | 590 x 622 x 140 mm<br>23.2 x 24.5 x 5.5" | 8.6 kg<br>18.9 lb | 13.6 kg<br>29.9 lb |




The weight is only for the single console models. It varies with accessories & options such as KVM, SDI, HDMI & DC power.

## < 1.3 > Installation - Installation Slides

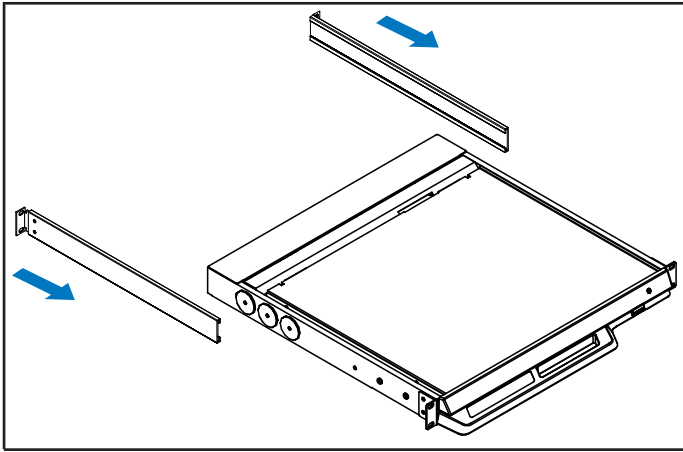


### Step 1

- Insert the left and right rear mounting brackets into the LCD console drawer.

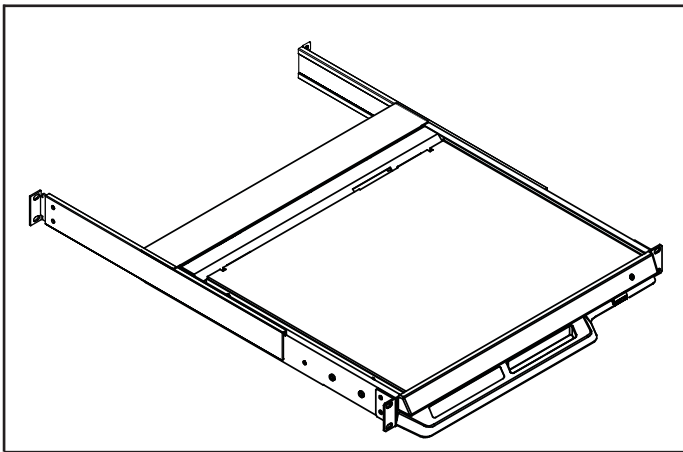

### Step 2

- Measure the depth of the front and rear mounting rails.
- Align each rear mounting bracket to a suitable length.

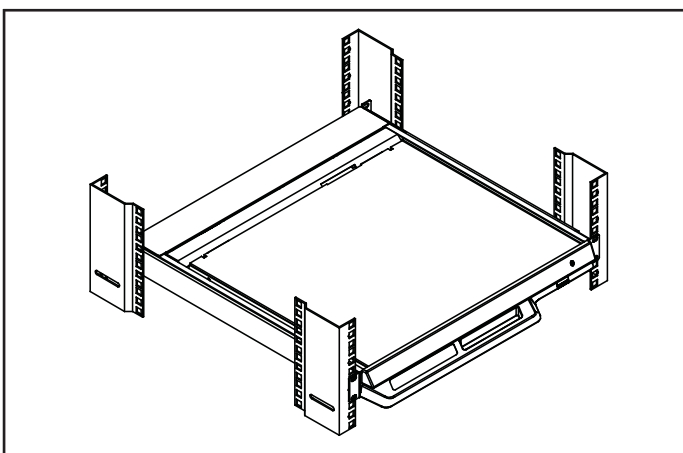

### Step 3

#### Complete the installation

- Fix the LCD console drawer into the rack.

 **M6 screw, cage nut & cup washer x 8 are provided.**



## < 1.3 > Installation - How to use the F117 drawer



- Hold the handle and slide out the drawer.



- Flip up the LCD to a suitable angle.



- Operate the LCD console drawer.


## < 1.3 > Installation - How to use the F1417 drawer



- Press the handle button and gently slide out the drawer.




- Flip up the LCD to a suitable angle.

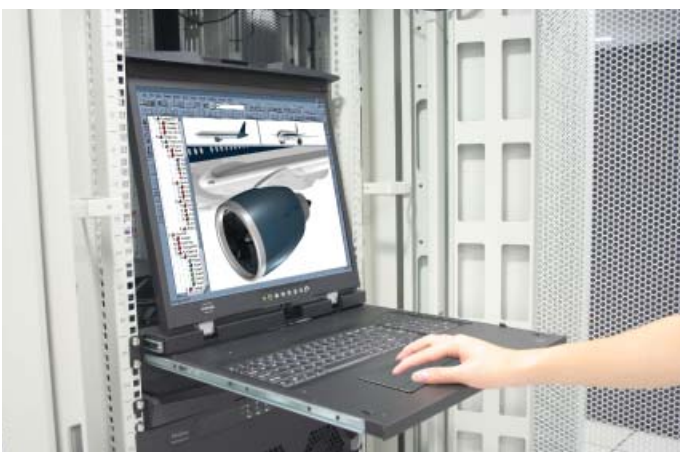

- Operate the LCD console drawer.


# Intentionally Left Blank

## < 1.4 > Connection to **USB Server** via CX-6 cable

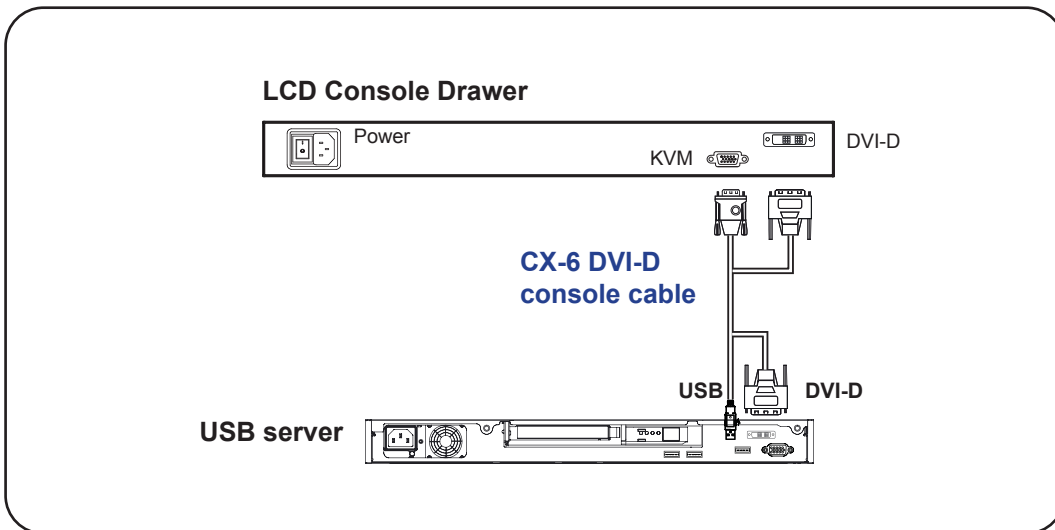

\* F1417 in external power

## < 1.4 > Connection to **external KVM** via CX-6 cable

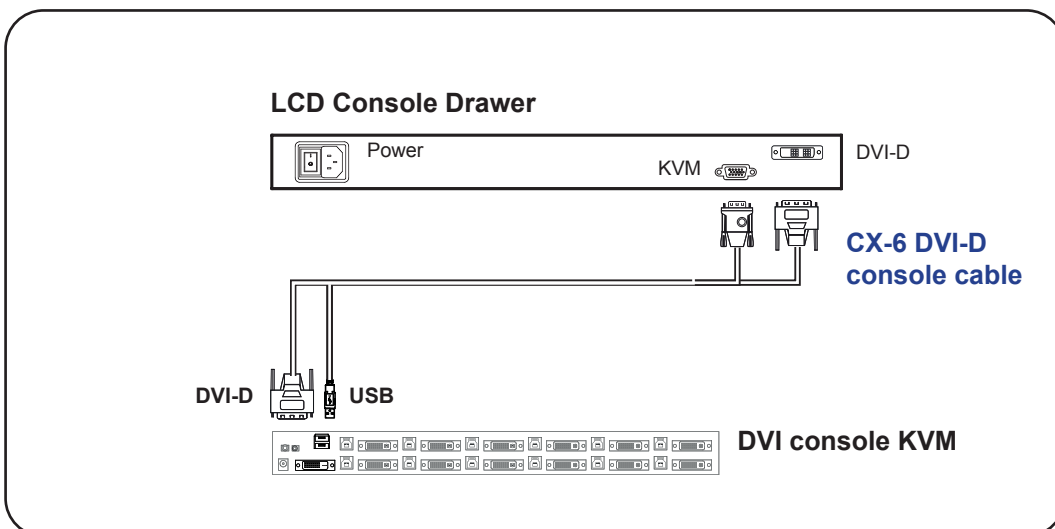


\* F1417 in external power




**Caution :** The LCD console drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and LCD console drawer. Before attempting to connect anything to the LCD console drawer, we suggest turning off the power to all devices. Apply power to connected devices again only after the LCD console drawer is receiving power. The company is not responsible for damage caused in this way.

## < 1.4 > Connection to **USB Server** via CB-6 cable

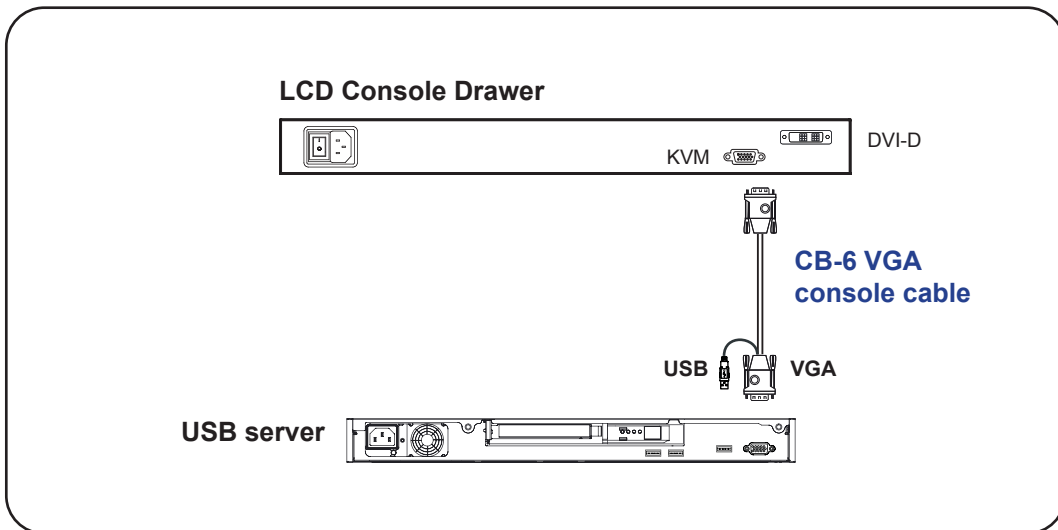

\* F1417 in external power

## < 1.4 > Connection to **external KVM** via CB-6 cable

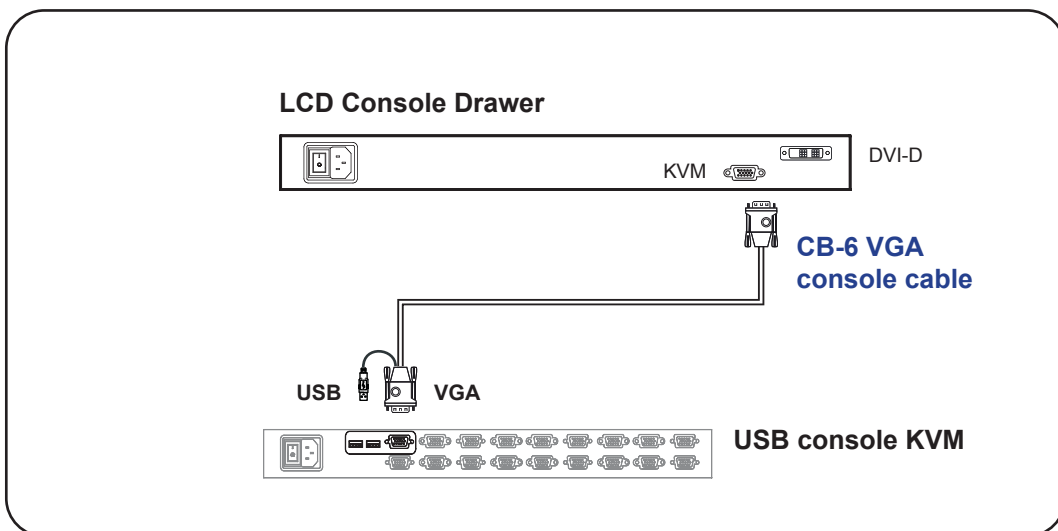

\* F1417 in external power



**Caution :** The LCD console drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and LCD console drawer. Before attempting to connect anything to the LCD console drawer, we suggest turning off the power to all devices. Apply power to connected devices again only after the LCD console drawer is receiving power. The company is not responsible for damage caused in this way.

## < 2.1 > Product Specifications

|                  |                                  |                          |
|------------------|----------------------------------|--------------------------|
| <b>LCD Panel</b> |                                  | <b>F117 / F1417</b>      |
|                  | Native Resolution                | 1920 x 1080              |
|                  | Panel Size ( diagonal )          | 17.3"                    |
|                  | Brightness ( cd/m <sup>2</sup> ) | 400                      |
|                  | Contrast Ratio ( typ. )          | 600:1                    |
|                  | Colors                           | 16.7 M, 8-bit            |
|                  | Viewing Angle ( L/R/U/D )        | 80/80/60/80              |
|                  | Response Time ( ms )             | 40                       |
|                  | Dot pitch ( mm )                 | 0.1989                   |
|                  | Display Area ( mm )              | 381.888H x 214.812V      |
|                  | Surface treatment                | Anti-glare, Hard-coating |
|                  | Surface hardness                 | 3H                       |
|                  | Backlight Type                   | LED                      |
|                  | MTBF ( hrs )                     | 50,000                   |

|              |                 |                   |                           |
|--------------|-----------------|-------------------|---------------------------|
| <b>Video</b> | Digital         | HDMI              | HDMI 1.3 / HDCP 1.3       |
|              |                 | DVI-D             | DVI-D, TMDS single link   |
|              | Analog          | VGA               | Analog 0.7Vp-p            |
|              |                 | Composite ( BNC ) | NTSC & PAL                |
|              |                 | S-Video ( 4-pin ) | NTSC & PAL                |
|              | Plug & Play     | DVI / VGA         | VESA EDID structure 1.3   |
|              | Synchronization | VGA               | Separate, Composite & SOG |

|              |  |                   |                                       |
|--------------|--|-------------------|---------------------------------------|
| <b>Power</b> | Power Supply                           | Range             | Auto-sensing 100 to 240VAC, 50 / 60Hz |
|              | Power Consumption for Single Console   | Screen ON         | Max. 25W                              |
|              |  | Power saving mode | Max. 4W                               |
|              |  | Power button OFF  | Max. 1W                               |
|              | Power Consumption with KVM integration | Screen ON         | Max. 55W                              |
|              |  | Power saving mode | Max. 34W                              |

\*For details, please refer to our KVM rear kit user manuals

|                   |             |                         |
|-------------------|-------------|-------------------------|
| <b>Compliance</b> | EMC         | FCC & CE certified      |
|                   | Safety      | CE / LVD certified      |
|                   | Environment | RoHS2 & REACH compliant |

|                                 |                         |             |                                  |
|---------------------------------|-------------------------|-------------|----------------------------------|
| <b>Environmental Conditions</b> | Operating               | Temperature | 0 to 55°C degree                 |
|                                 |                         | Humidity    | 20~90%, non-condensing           |
|                                 |                         | Altitude    | 16,000 ft                        |
|                                 | Storage / Non-operating | Temperature | -20 to 60°C degree               |
|                                 |                         | Humidity    | 5~90%, non-condensing            |
|                                 |                         | Altitude    | 40,000 ft                        |
|                                 |                         | Shock       | 10G acceleration (11ms duration) |
|                                 |                         | Vibration   | 5~500Hz 1G RMS random            |



|                               |                       |  |  |
|-------------------------------|-----------------------|--|--|
| <b>Physical Specification</b> |                       | <b>F117</b>                                    | <b>F1417</b>                                   |
|                               | Product ( W x D x H ) | 441.6 x 460 x 44 mm<br>17.4 x 18.1 x 1.73 inch | 441.6 x 400 x 44 mm<br>17.4 x 15.7 x 1.73 inch |
|                               | Packing ( W x D x H ) | 590 x 808 x 140 mm<br>23.2 x 31.8 x 5.5 inch   | 590 x 622 x 140 mm<br>23.2 x 24.5 x 5.5 inch   |
|                               | Net Weight            | 10.8 kg / 23.8 lb                              | 8.6 kg / 18.9 lb                               |
|                               | Gross Weight          | 15.8 kg / 34.8 lb                              | 13.6 kg / 29.9 lb                              |

|                          |                                       |                                   |                             |
|--------------------------|---------------------------------------|-----------------------------------|-----------------------------|
| <b>Applicable Format</b> | DVI-D / VGA Input                     | PC Signal                         | 1920 x 1080 x 60Hz          |
|                          |                                       |                                   | 1360 x 768 x 60Hz           |
|                          |                                       |                                   | 1280 x 1024 x 60 / 75Hz     |
|                          |                                       |                                   | 1280 x 960 x 60Hz           |
|                          |                                       |                                   | 1280 x 768 x 60 / 75Hz      |
|                          |                                       |                                   | 1152 x 864 x 75Hz           |
|                          |                                       |                                   | 1024 x 768 x 60 / 70 / 75Hz |
|                          |                                       |                                   | 848 x 480 x 60Hz            |
|                          |                                       |                                   | 800 x 600 x 60 / 72 / 75Hz  |
|                          |                                       |                                   | 720 x 400 x 70Hz            |
|                          | 640 x 480 x 60 / 72 / 75Hz            |                                   |                             |
|                          | 640 x 400 x 70Hz                      |                                   |                             |
|                          | 640 x 350 x 70Hz                      |                                   |                             |
|                          | HDMI Input                            | Audio Signal                      | 2ch Linear PCM              |
|                          |                                       |                                   | PC Signal                   |
| HDMI 1.3                 |                                       | 1920 x 1080 x 50 / 60Hz ( 1080p ) |                             |
|                          |                                       | 1920 x 1080 x 25 / 30Hz ( 1080i ) |                             |
|                          |                                       | 1280 x 720 x 50 / 60Hz ( 720p )   |                             |
| Audio Signal             | 720 x 480 x 50 / 60Hz ( 576p / 480p ) |                                   |                             |
|                          | 2ch Linear PCM                        |                                   |                             |



\*In some circumstances, if the user connects the LCD to PC via HDMI port or video and audio signals, the LCD may display incorrectly on a full screen. If so, please adjust the display card setting on display size to fix the issue.

## < 2.2 > Standard Keyboard / Mouse Specifications

**Ge** G keyboard integrated with touchpad

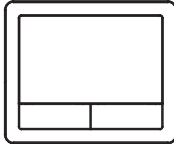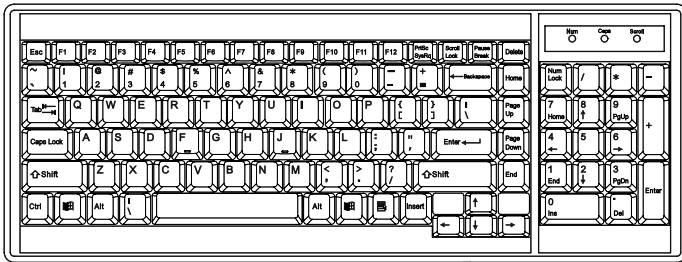

**Gb** G keyboard integrated with trackball

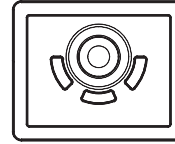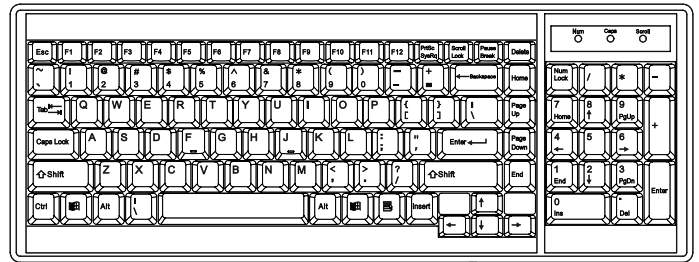

|                            |                                 |
|----------------------------|---------------------------------|
| <b>Key force</b>           | 55 ± 5g                         |
| <b>Travelling distance</b> | 3 ± 0.3mm                       |
| <b>Switch life</b>         | > 10 million life cycle time    |
| <b>OS support</b>          | Windows / Linux / Unix / Mac OS |

### Supporting layouts

America



United States



United Kingdom



Germany



France



Spain



Norway

EMEA



Italy



Russia



Switzerland



Netherlands



Portugal

Asia



China



Japan



Korea



Arabia





Turkey





## < 2.2 > MAC Keyboard / Mouse Options

**Me** MAC keyboard integrated with touchpad

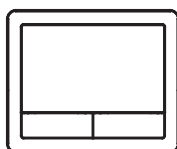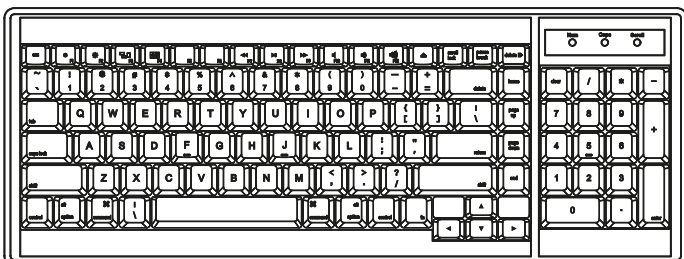

**Mb** MAC keyboard integrated with trackball

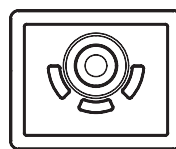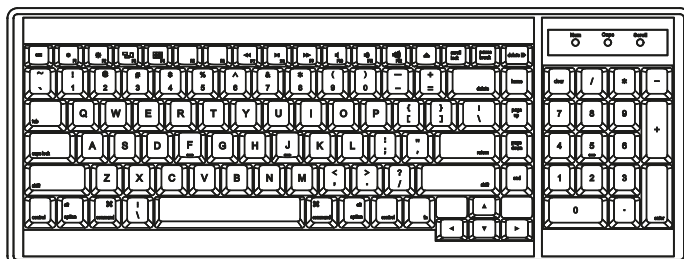


### Supporting layouts

America   
United States

## How to Use "MAC" Keyboard

 
### Keyboard Features



**F1**  
Decrease display brightness



 
**F9**  
Fast-forward



**F2**  
Increase display brightness



 **F10**  
Mute sound



**F3**  
Mission control  
\* Only works with OS X Lion default Keyboard Shortcuts.



**F11**  
Decrease volume



 
**F4**  
Dashboard



**F12**  
Increase volume



**F7**  
Rewind



**Eject disc**





**F8**  
Play / Pause





**Command**

## < 2.2 > SUN Keyboard / Mouse Options

**Se** S keyboard integrated with touchpad

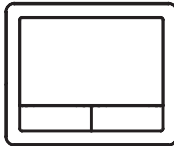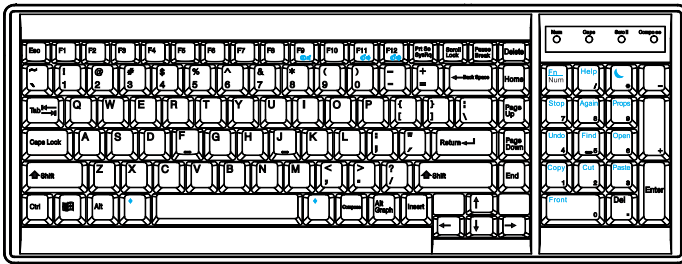

**Sb** S keyboard integrated with trackball

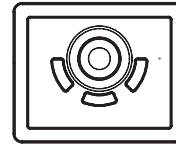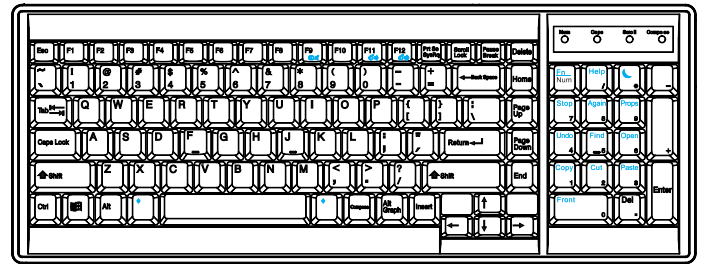


### S keyboard integrated with touchpad / trackball




- Incorporates SUN keys, including Stop, Cut, Paste, Compose, Copy and Help
- 104 key notepad keyboard with full numerical pad and SUN function
- USB interface
- US layout only

### How to Use "S" Keyboard

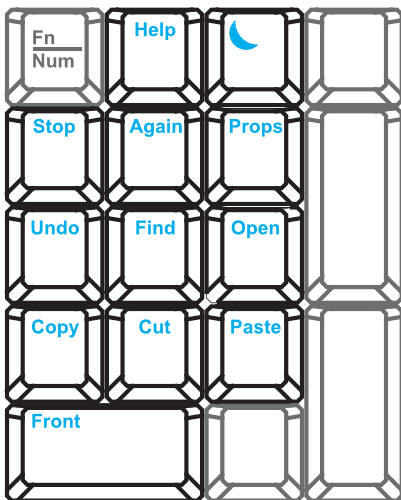

#### Num LED in Off mode

Key pad behaves as a SUN Solar system administration command mode

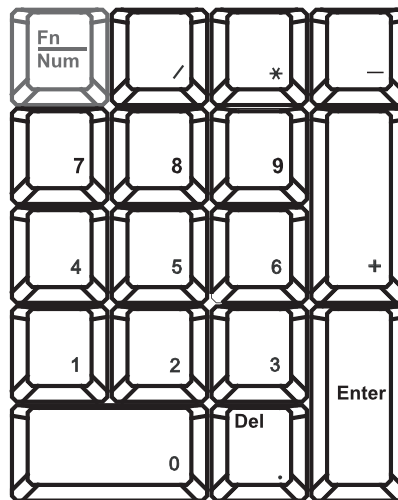


#### Num LED in Green mode


Key pad behaves as a normal key pad mode

### Audio / Display Keys

 
\* Please ask your supplier for full details



 **F9**  
Audio : Mute  
Display : Degauss



 **F11**  
Audio : Decrease volume  
Display : Decrease contrast



**F12**  
Audio : Increase volume  
Display : Increase contrast

# Intentionally Left Blank

## < 2.3 > On-screen Display Operation ( OSD )

### F117



| Membrane Switch | Function   |
|-----------------|--|
|                 | Turn the monitor on or off   |
|                 | Display the OSD menu<br>Act as an Enter key to select screen setting options   |
|                 | Scroll through menu options and adjust the displayed control                   |
|                 | Exit the OSD screen<br>Go back to the previous on-screen sub-menu or main menu |

 
Remark : All LED touch buttons in **WHITE** light.

The LED of **Power** touch button will flash continuously when there is no signal input.

- ① All the LED touch buttons will automatically turn off after 10 minutes of idle status ( except the **Power** ).
- ② Light up all membrane buttons, please press any button for 1 - 2 seconds ( except the **Power** ).

### F1417

- Power light
- Green = On
- Orange = Power saving




| Membrane Switch | Function   |
|-----------------|--|
|                 | Power on / off LCD   |
|                 | Display the OSD menu   |
|                 | Scrolls through menu options and adjusts the displayed control<br>(To auto adjustment by pressing the button  for 5 seconds) |
|                 | Exit the OSD screen<br>Toggle analog, digital & video connection (DVI-D and video options only)                              |

## < 2.3 > On-screen Display Operation ( OSD )


### ① Picture

|                |   |
|----------------|---|
| Picture mode : | Standard / Vivid / Soft / User mode to choose   |
| Brightness :   | Adjust background black level of the screen image   |
| Contrast :     | Adjust the difference between the image background (black level) and the foreground (white level) |
| Hue:           | Adjust the screen hue value   |
| Saturation :   | Adjust the saturation of the image color  |
| Picture size : | Adjust the image size   |
| Color temp :   | Standard / Cool / Warm / User to choose   |
| Noise reduce : | Reduce the noise of the image   |
| Sharpness :    | Adjust the image from weak to sharp   |

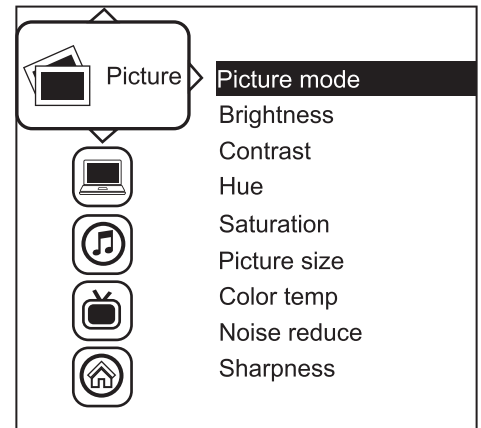


### ② PC

|               |   |
|---------------|---|
| Auto adjust : | Automatically adjust sizes, centers and fine tunes the video signal to eliminate waviness and distortion. |
| Clock :       | Adjust the clock value  |
| Phase :       | Adjust the phase value  |
| H. Position : | Align the screen image left or right  |
| V. Position : | Align the screen image up or down   |

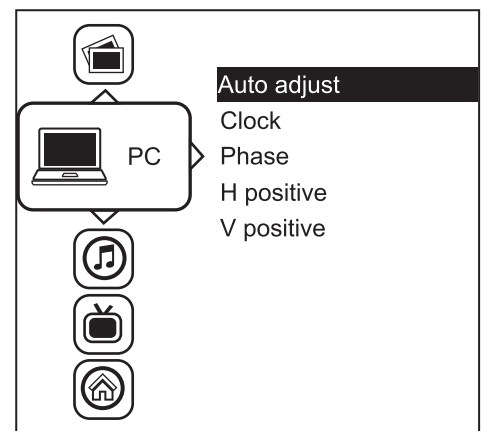


### ③ Audio

|                   |  |
|-------------------|--|
| Audio mode :      | Movie / Voice / Normal / Music mode to choose  |
| Volume :          | Adjust the volume of sound                     |
| Bass :            | Set the value of bass sound                    |
| Treble :          | Set the value of treble sound                  |
| Balance :         | Set the balance value of treble and bass sound |
| Analog TV audio : | Set the value of analog TV audio sound         |
| Mute :            | Turn off the surrounding sound                 |

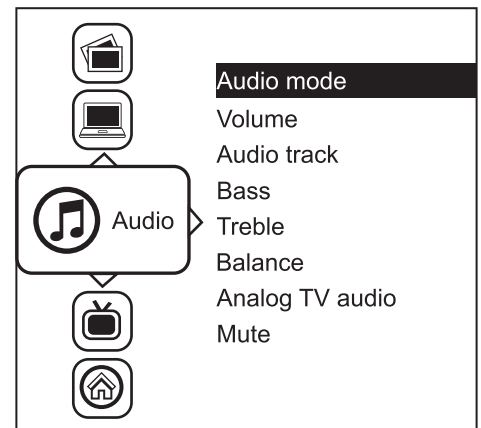

### ④ MISC

|                |  |
|----------------|--|
| Language :     | Select the language in which the OSD menu is displayed - English |
| Sleep timer :  | Set the off time   |
| PIP mode :     | Adjust picture in picture setting                                |
| PIP position : | Enter into PIP position  |
| PIP source :   | Enter into the Sub source and sound source                       |
| System reset : | Return the adjustment back to factory setting                    |
| Information :  | Select for Help  |

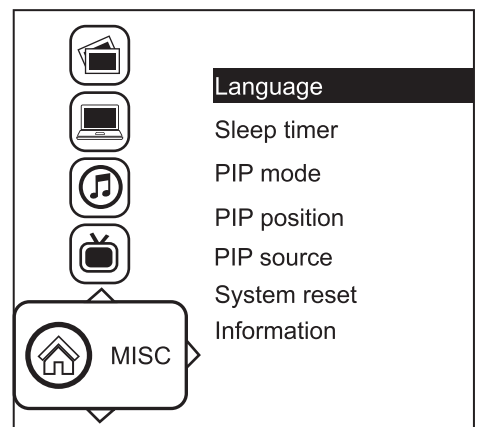


< Part 3 >

< 3.1 > Options : 3G / HD / SD-SDI input




Austin Hughes' SDI input is an ideal solution for the broadcast-grade video and high resolution CCTV market.

Designed for use with CyberView displays, a SDI input module can support up to 1080p @60Hz resolution without using additional space or power and it comes standard with a 2-year warranty.

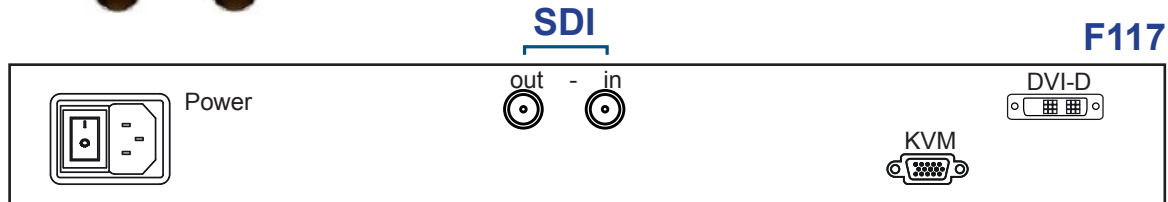

\*\*\* For SDI option, F117 chassis extension in depth to 530mm ( 20.9" )

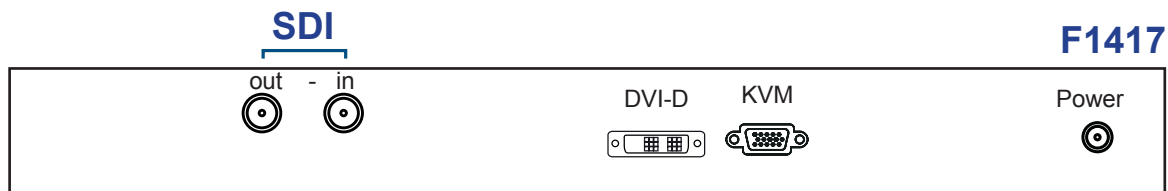

|              |            |  |
|--------------|------------|--|
| <b>INPUT</b> | 3G-SDI IN  | BNC x 1 / 0.8Vp-p ( 75 ohm )                   |
|              | 3G-SDI OUT | BNC x 1 / Active through, equalized & relocked |

|                            |       |   |
|----------------------------|-------|---|
| <b>Standard Compliance</b> | Video | SMPTE 425M / 274M / 296M / 125M<br>ITU-R BT.656 |
|                            | Audio | SMPTE 299M / 272M-C                             |

|                                |                         |                              |
|--------------------------------|-------------------------|------------------------------|
| <b>Compatible Video Format</b> | 3G-SDI                  | 1080p @60 / 50Hz, 4:2:2      |
|                                |                         | 1080p @30 / 25 / 24Hz, 4:4:4 |
|                                |                         | 1080i @60 / 50Hz, 4:4:4      |
|                                |                         | 720p @60 / 50Hz, 4:4:4       |
|                                | HD-SDI                  | 1080p @30 / 25 / 24Hz, 4:2:2 |
|                                | 1080i @60 / 50Hz, 4:2:2 |                              |
|                                | 720p @60 / 50Hz, 4:2:2  |                              |
|                                | SD-SDI                  | 480i @60Hz, 4:2:2            |
|                                | ITU-R BT.656            | 576i @50Hz, 4:2:2            |

|                                |        |   |
|--------------------------------|--------|---|
| <b>Compatible Audio Format</b> | 3G-SDI | 48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized Video                 |
|                                | HD-SDI | 48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized Video                 |
|                                | SD-SDI | 48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized / Asynchronized Video |

|  |        |                   |
|--|--------|-------------------|
| <b>Max. Transmission Distance<br/>75 ohm coaxial cable</b> | 3G-SDI | 150m at 2.97Gb/s  |
|  | HD-SDI | 250m at 1.485Gb/s |
|  | SD-SDI | 480m at 270Mb/s   |

# Intentionally Left Blank


## < 3.2 > F117 Options :

- **HDMI 1.3** ( HDCP 1.3 )
- **Audio** ( Built-in Dual Stereo Speakers, 2W x 2 )  
( 3.5mm audio jacks for audio in & out )



( 1 ) In some circumstances, if the user connects the LCD to PC via HDMI port for video and audio signals, the LCD may display incorrectly on a full screen. If so, please adjust the display card setting on display size to fix the issue.

- ( 2 ) F117 chassis extension in depth to 480mm ( 18.9" )  
F117 chassis extension in depth to 530mm ( 20.9" )

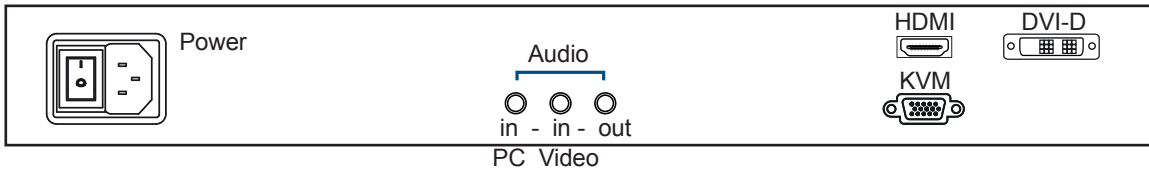




## < 3.2 > F1417 Options :

### - HDMI 1.3 ( HDCP 1.3 )



( 1 ) In some circumstances, if the user connects the LCD to PC via HDMI port for video and audio signals, the LCD may display incorrectly on a full screen. If so, please adjust the display card setting on display size to fix the issue.

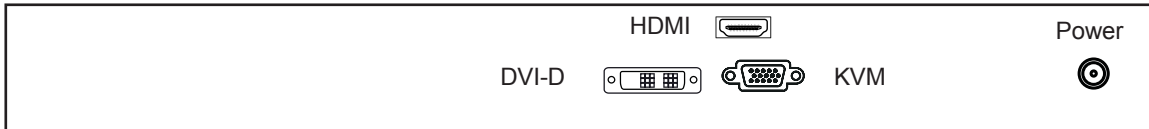

## < 3.3 > Options : Touchscreen & driver




### F17" USB Touchscreen Specification

|                           |                               |
|---------------------------|-------------------------------|
| <b>Model</b>              | <b>TRB e-Resistive</b>        |
| <b>Technology</b>         | 5-Wire Resistive              |
| <b>Touch Point</b>        | Single                        |
| <b>Input Type</b>         | Finger or Stylus              |
| <b>Resolution</b>         | 2048 x 2048                   |
| <b>Response Speed</b>     | 15 ms                         |
| <b>Activation Force</b>   | ≤ 50 g                        |
| <b>Surface Hardness</b>   | 3H                            |
| <b>Light Transmission</b> | 80% ± 3%                      |
| <b>Haze</b>               | 8% ± 3%                       |
| <b>Durability</b>         | 10 million touches            |
| <b>Top Layer</b>          | ITO Film                      |
| <b>Bottom Layer</b>       | ITO Glass                     |
| <b>Thickness</b>          | 2.2 ± 0.2 mm                  |
| <b>Connector</b>          | USB Type A                    |
| <b>Compatibility</b>      | Windows 7 / XP / Vista, Linux |

- USB touchscreen package includes 1 x 6ft USB cable, quick reference guideline and CD disc
- For detailed information, please refer to the attached CD disc
- As the touchscreen unit is not made of toughened glass, please handle it carefully


### USB Touchscreen

**F117**

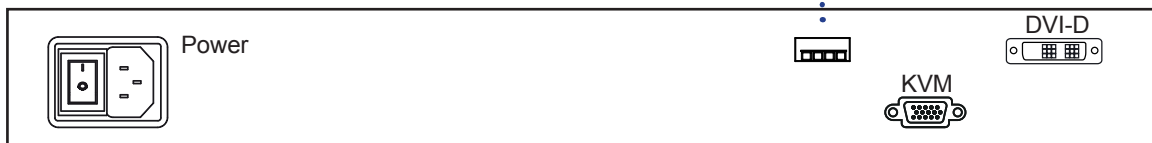

### USB Touchscreen

**F1417**

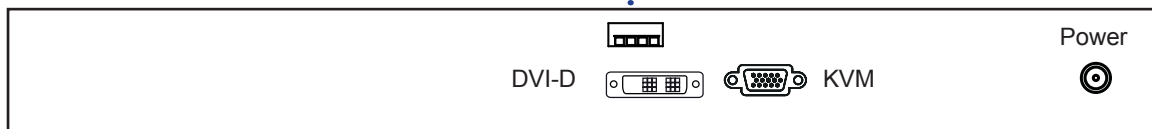

## < 3.3 > Options : Touchscreen & driver



### TRB Driver

**Please follow the below steps to setup the touch screen:-**

**Step 1.** Run the bundled CD disc or download the driver from the link below :  
<http://www.austin-hughes.com/resources/driver/ultraview>


**Step 2.** Double click the Setup.exe

**Step 3.** Follow the installation instruction to finish the setup

**Step 4.** After installation, run the TouchKit program & the “4 point calibration”



Please do the initial calibration  
after the first setup

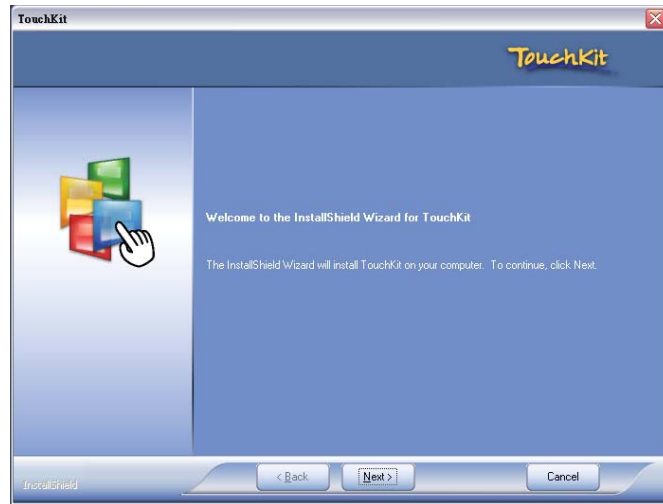

## < 3.4 > Options : DC Power

| Model                | 12V     | 24V      | 48V      | 125V      |
|----------------------|---------|----------|----------|-----------|
| <b>Input rating</b>  |         |          |          |           |
| Input voltage:       | 12-Volt | 24-Volt  | 48-Volt  | 110-Volt  |
| Input range:         | 9 ~ 18V | 18 ~ 36V | 36 ~ 75V | 66 ~ 160V |
| Input current        |         |          |          |           |
| - No load            | 50 mA   | 50 mA    | 50 mA    | 35 mA     |
| - Full load          | 4950 mA | 2450 mA  | 1220 mA  | 749 mA    |
| <b>Output rating</b> |         |          |          |           |
| Output voltage:      | 12-Volt | 12-Volt  | 12-Volt  | 12-Volt   |
| Output current:      | 4.16A   | 4.16A    | 4.16A    | 6.25A     |
| <b>Efficiency</b>    | 84%     | 85%      | 85%      | 91%       |

### DC power

F117




F1417


DC power



\*\*\* For DC power option :


- ( 1 ) If the unit with LCD, **earthing** may be required 
- ( 2 ) DC option excludes AC power adapter and power cord.
- ( 3 ) F117 chassis extension in depth to 530mm ( 20.9" )
- ( 4 ) F1417 chassis extension in depth to 490mm ( 19.3" )

## < 3.5 > Options : **ORB-2.1** 2-Post Rack Mounting Brackets

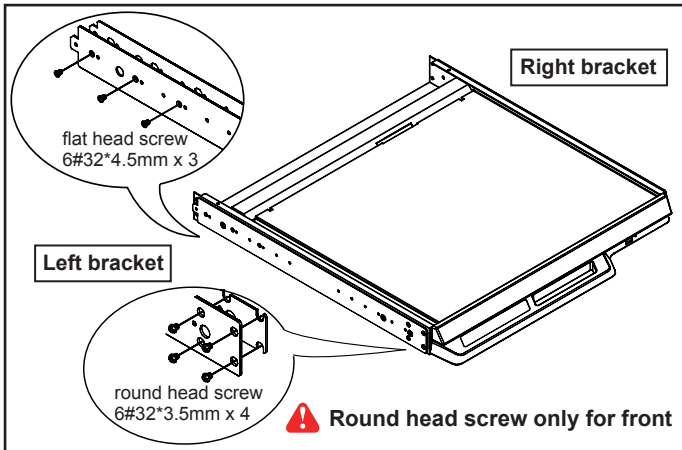


### Step 1

- Before apply 2-post rack brackets, please release front mounting ears and rear mounting wheels.
- Attach **left and right mounting brackets** to the drawer with the screws below :  
6#32\*3.5 mm screw x 8 ( only for front )  
6#32\*4.5 mm screw x 6 ( only for rear )

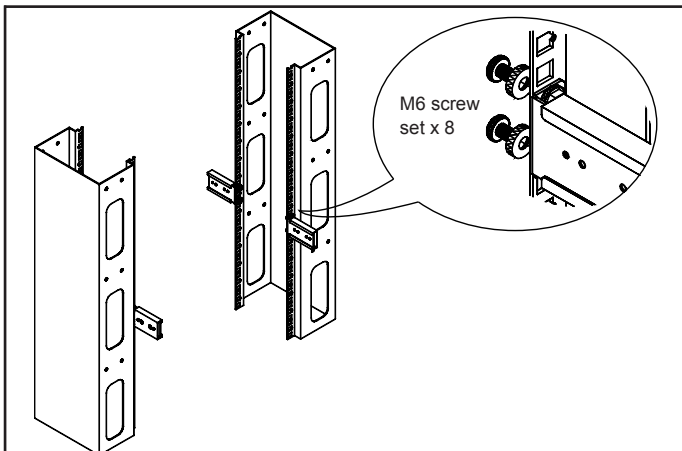


### Step 2

- Attach the set of 4 mini brackets to the 2-post rack.
- M6 screw set is not provided.

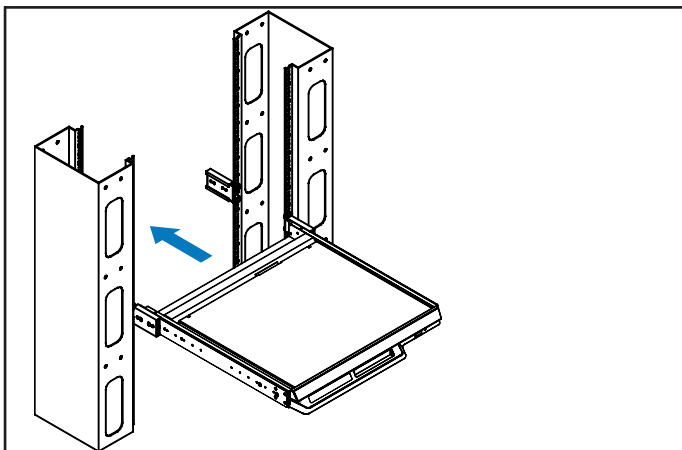

### Step 3

- Insert the drawer into the mini brackets.

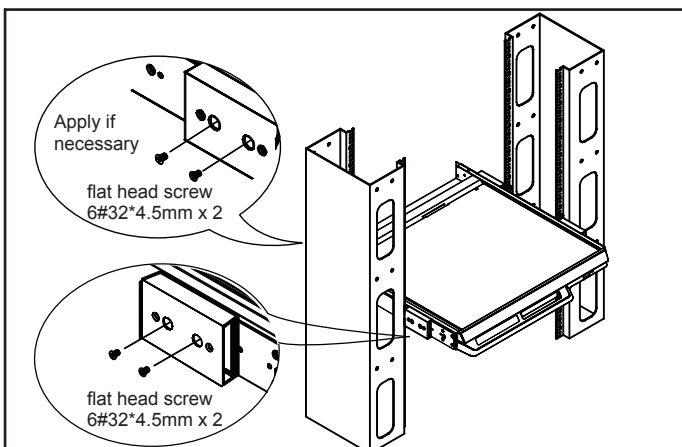

### Step 4

- Fix the LCD console drawer to the mini brackets with 6#32\*4.5 mm screw x 8.
- Installation completed





**This step is necessary for front.  
Failure to complete this will cause damage.**



## < Part 4 >

### < 4.1 > F117 KVM Integration



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MUKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MUKVM-KIT.pdf)

| Matrix<br>Cat6 KVM  |  | Remote | 8-port | 16-port         | 32-port         |
|--|---|--------|--------|-----------------|-----------------|
|  | 1   | 1      | -      | F117 - MUIP1613 | F117 - MUIP3213 |
|  | 2   | 1      | -      | F117 - MUIP1624 | F117 - MUIP3224 |
|  | 0   | 1      | -      | F117 - MU1602   | F117 - MU3202   |
|  | 0   | 2      | -      | F117 - MU1603   | F117 - MU3203   |
|  | 0   | 3      | -      | F117 - MU1604   | F117 - MU3204   |



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-UKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-UKVM-KIT.pdf)

| Cat6 KVM  |  | Remote | 8-port        | 16-port        | 32-port        |
|--|---|--------|---------------|----------------|----------------|
|  | 1   | 0      | F117 - UIP802 | F117 - UIP1602 | F117 - UIP3202 |
|  | 0   | 1      | F117 - U802   | F117 - U1602   | F117 - U3202   |
|  | 0   | 0      | F117 - U801   | F117 - U1601   | F117 - U3201   |



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-DVIKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-DVIKVM-KIT.pdf)

| DVI-D<br>KVM  |  | Remote | 12-port      | - | - |
|--|---|--------|--------------|---|---|
|  | 0   | 0      | F117 - 1201D | - | - |



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-USBKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-USBKVM-KIT.pdf)

| USB Hub<br>DB-15 KVM  |  | Remote | 8-port        | 16-port        | 32-port |
|--|---|--------|---------------|----------------|---------|
|  | 1   | 0      | F117 - IP802H | F117 - IP1602H | -       |
|  | 0   | 1      | F117 - 802H   | F117 - 1602H   | -       |
|  | 0   | 0      | F117 - 801H   | F117 - 1601H   | -       |

[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MKVM-KIT.pdf)

| Matrix<br>DB-15 KVM  |  | Remote | 8-port        | 16-port        | 32-port |
|---|---|--------|---------------|----------------|---------|
|   | 1   | 1      | F117 - MIP813 | F117 - MIP1613 | -       |
|   | 2   | 1      | F117 - MIP824 | F117 - MIP1624 | -       |
|   | 0   | 1      | F117 - M802   | F117 - M1602   | -       |
|   | 0   | 2      | F117 - M803   | F117 - M1603   | -       |
|   | 0   | 3      | F117 - M804   | F117 - M1604   | -       |



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-SKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-SKVM-KIT.pdf)

| Combo<br>DB-15 KVM  |  | Remote | 8-port       | 16-port       | 32-port |
|--|---|--------|--------------|---------------|---------|
|  | 1   | 0      | F117 - IP802 | F117 - IP1602 | -       |
|  | 0   | 1      | F117 - 802   | F117 - 1602   | -       |
|  | 0   | 0      | F117 - S801  | F117 - S1601  | -       |



| Model         | Product Dimension<br>(W x D x H)           | Packing Dimension<br>(W x D x H)         | Net Weight         | Gross Weight       |
|---------------|--|--|--------------------|--------------------|
| F117 with KVM | 441.6 x 580 x 44 mm<br>17.4 x 22.8 x 1.73" | 590 x 808 x 140 mm<br>23.2 x 31.8 x 5.5" | 11.6 kg<br>25.5 lb | 17.5 kg<br>38.5 lb |

## < 4.2 > F1417 KVM Integration



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MUKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MUKVM-KIT.pdf)

| Matrix<br>Cat6 KVM  |  | Remote | 8-port | 16-port          | 32-port          |
|--|---|--------|--------|------------------|------------------|
|  | 1   | 1      | -      | F1417 - MUIP1613 | F1417 - MUIP3213 |
|  | 2   | 1      | -      | F1417 - MUIP1624 | F1417 - MUIP3224 |
|  | 0   | 1      | -      | F1417 - MU1602   | F1417 - MU3202   |
|  | 0   | 2      | -      | F1417 - MU1603   | F1417 - MU3203   |
|  | 0   | 3      | -      | F1417 - MU1604   | F1417 - MU3204   |



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-UKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-UKVM-KIT.pdf)

| Cat6 KVM  |  | Remote | 8-port         | 16-port         | 32-port         |
|--|---|--------|----------------|-----------------|-----------------|
|  | 1   | 0      | F1417 - UIP802 | F1417 - UIP1602 | F1417 - UIP3202 |
|  | 0   | 1      | F1417 - U802   | F1417 - U1602   | F1417 - U3202   |
|  | 0   | 0      | F1417 - U801   | F1417 - U1601   | F1417 - U3201   |



[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-DVIKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-DVIKVM-KIT.pdf)

| DVI-D<br>KVM  |  | Remote | 12-port       | - | - |
|--|---|--------|---------------|---|---|
|  | 0   | 0      | F1417 - 1201D | - | - |

[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MKVM-KIT.pdf)

| Matrix<br>DB-15 KVM  |  | Remote | 8-port         | 16-port         | 32-port |
|---|---|--------|----------------|-----------------|---------|
|   | 1   | 1      | F1417 - MIP813 | F1417 - MIP1613 | -       |
|   | 2   | 1      | F1417 - MIP824 | F1417 - MIP1624 | -       |
|   | 0   | 1      | F1417 - M802   | F1417 - M1602   | -       |
|   | 0   | 2      | F1417 - M803   | F1417 - M1603   | -       |
|   | 0   | 3      | F1417 - M804   | F1417 - M1604   | -       |

[www.austin-hughes.com/support/usermanual/cyberview/UM-CV-SKVM-KIT.pdf](http://www.austin-hughes.com/support/usermanual/cyberview/UM-CV-SKVM-KIT.pdf)

| Combo<br>DB-15 KVM  |  | Remote | 8-port        | 16-port        | 32-port |
|--|---|--------|---------------|----------------|---------|
|  | 1   | 0      | F1417 - IP802 | F1417 - IP1602 | -       |
|  | 0   | 1      | F1417 - 802   | F1417 - 1602   | -       |
|  | 0   | 0      | F1417 - S801  | F1417 - S1601  | -       |

| Model          | Product Dimension<br>(W x D x H)           | Packing Dimension<br>(W x D x H)         | Net Weight         | Gross Weight       |
|----------------|--|--|--------------------|--------------------|
| F1417 with KVM | 441.6 x 540 x 44 mm<br>17.4 x 21.3 x 1.73" | 590 x 622 x 140 mm<br>23.2 x 24.5 x 5.5" | 10.4 kg<br>22.9 lb | 16.3 kg<br>35.9 lb |

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2018 Austin Hughes Electronics Ltd. All rights reserved.